



## X300 Sheen Flame Gun - Instruction for Wick Replacement.

Ensure control valve is switched off.

Remove bolt holding handle to burner.

Remove burner from the control valve.

You should now be left with the burner coil tube and outer chimney, the wick is sandwiched in between the inner coil and outer chimney.

Remove the nut holding the chimney on to coil jet block and slide the chimney up and off the coil tube.

Remove the wick by sliding it up and off the coil tube.

The new wick should come with a slit in it about 3/4 the way up. Slide the new wick down the coil tube, ensuring the longer part will sit at the bottom under the jet.

Refit as reverse of these instructions.